



Breville JE98XL Juice Fountain Plus Lid Replacement

Remove the lid from the juicer body to access the internal components.

Written By: Kurt Wacker



INTRODUCTION

Make sure the device is off and unplugged before every disassembly.

Step 1 — Pulp Basket



- Place the juicer on a flat surface. Make sure the juicer is unplugged and in the "off" position. For the following steps, the pulp basket is on the left.

Step 2



- Tilt the juicer slightly to the right so the pulp basket is off of your surface.

Step 3



- Pull the pulp basket down and out from under the juicer cover.

Step 4 — Lid



- Place one hand on either side of the safety locking arm.
- Disengage the locking mechanism by pulling down on the lever with even pressure. The lever should be free to move up or down once it has been properly disengaged.

Step 5



- Firmly grip both sides of the juicer. Twist clock-wise and lift to remove the lid.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-29 07:48:02 AM.